

## Produktinformation

### Information



*Tillverkare* Acer

*Artnr* NP.STY1A.016



## Acer Active Stylus ASA630 - aktiv penna - silver

### Specifikation

#### Allmänt

**Typ av enhet**

Aktiv penna

**Färg**

Silver

**Lokalisering**

Frankrike, Tyskland, Italien, Polen, Storbritannien

#### Kompatibilitetsinformation

**Designat för**

Acer Spin 5 SP514-51N Acer TravelMate Spin B1 TMB118-R-C01X, TMB118-R-C0VY, TMB118-R-C16T, TMB118-R-C21K, TMB118-R-C2DC, TMB118-R-C2GJ, TMB118-R-C2RD, TMB118-R-C2UK, TMB118-R-C2WD, TMB118-R-C2WX, TMB118-R-C32P, TMB118-R-C3C4, TMB118-R-C3JV, TMB118-R-C3TD, TMB118-R-C4CA, TMB118-R-C4FV, TMB118-R-C4XE, TMB118-R-C553, TMB118-R-C5C6, TMB118-R-C5LD, TMB118-R-C5PS, TMB118-R-C65T, TMB118-R-C667, TMB118-R-C6LH, TMB118-R-C7A8, TMB118-R-C7Y4, TMB118-R-C7ZP, TMB118-R-C815, TMB118-R-C86U, TMB118-R-C8L4, TMB118-R-C8VQ, TMB118-R-C9PU, TMB118-R-C9Y8, TMB118-RN-C067, TMB118-RN-C09Q, TMB118-RN-C0KG, TMB118-RN-C0T2, TMB118-RN-C0VL, TMB118-RN-C0VZ, TMB118-RN-C0WX, TMB118-RN-C14B, TMB118-RN-C1S2, TMB118-RN-C20K, TMB118-RN-C221, TMB118-RN-C22R, TMB118-RN-C2B0, TMB118-RN-C2F1, TMB118-RN-C2FH, TMB118-RN-C2YJ, TMB118-RN-C3LD, TMB118-RN-C3UE, TMB118-RN-C3V5, TMB118-RN-C42Z, TMB118-RN-C4HX, TMB118-RN-C4TM, TMB118-RN-C53N, TMB118-RN-



---

C5GQ, TMB118-RN-C5MC, TMB118-RN-C5PT, TMB118-RN-C5V3, TMB118-RN-C62U, TMB118-RN-C64H, TMB118-RN-C68L, TMB118-RN-C6F3, TMB118-RN-C6FD, TMB118-RN-C6VF, TMB118-RN-C7N8, TMB118-RN-C86R, TMB118-RN-C8RJ, TMB118-RN-C8WP, TMB118-RN-C918, TMB118-RN-C97P, TMB118-RN-C9E9, TMB118-RN-C9EH, TMB118-RN-C9SY, TMB118-RN-C9V8, TMB118-RN-P09K, TMB118-RN-P0GL, TMB118-RN-P0LZ, TMB118-RN-P1JT, TMB118-RN-P1KY, TMB118-RN-P1P9, TMB118-RN-P1ZX, TMB118-RN-P25L, TMB118-RN-P2AD, TMB118-RN-P2L2, TMB118-RN-P2LY, TMB118-RN-P31H, TMB118-RN-P3AC, TMB118-RN-P3PV, TMB118-RN-P3T8, TMB118-RN-P3U3, TMB118-RN-P3Z1, TMB118-RN-P43Q, TMB118-RN-P4J9, TMB118-RN-P4KG, TMB118-RN-P4V8, TMB118-RN-P544, TMB118-RN-P556, TMB118-RN-P5PL, TMB118-RN-P5VU, TMB118-RN-P639, TMB118-RN-P7B9, TMB118-RN-P7HS, TMB118-RN-P7PC, TMB118-RN-P7R9, TMB118-RN-P7X9, TMB118-RN-P8MH, TMB118-RN-P8N5, TMB118-RN-P9KY, TMB118-RN-P9LW, TMB118-RN-P9P7, TMB118-R-P11R, TMB118-R-P27R, TMB118-R-P2AX, TMB118-R-P2FC, TMB118-R-P40Z, TMB118-R-P41V, TMB118-R-P49U, TMB118-R-P676, TMB118-R-P9HF